



DS100

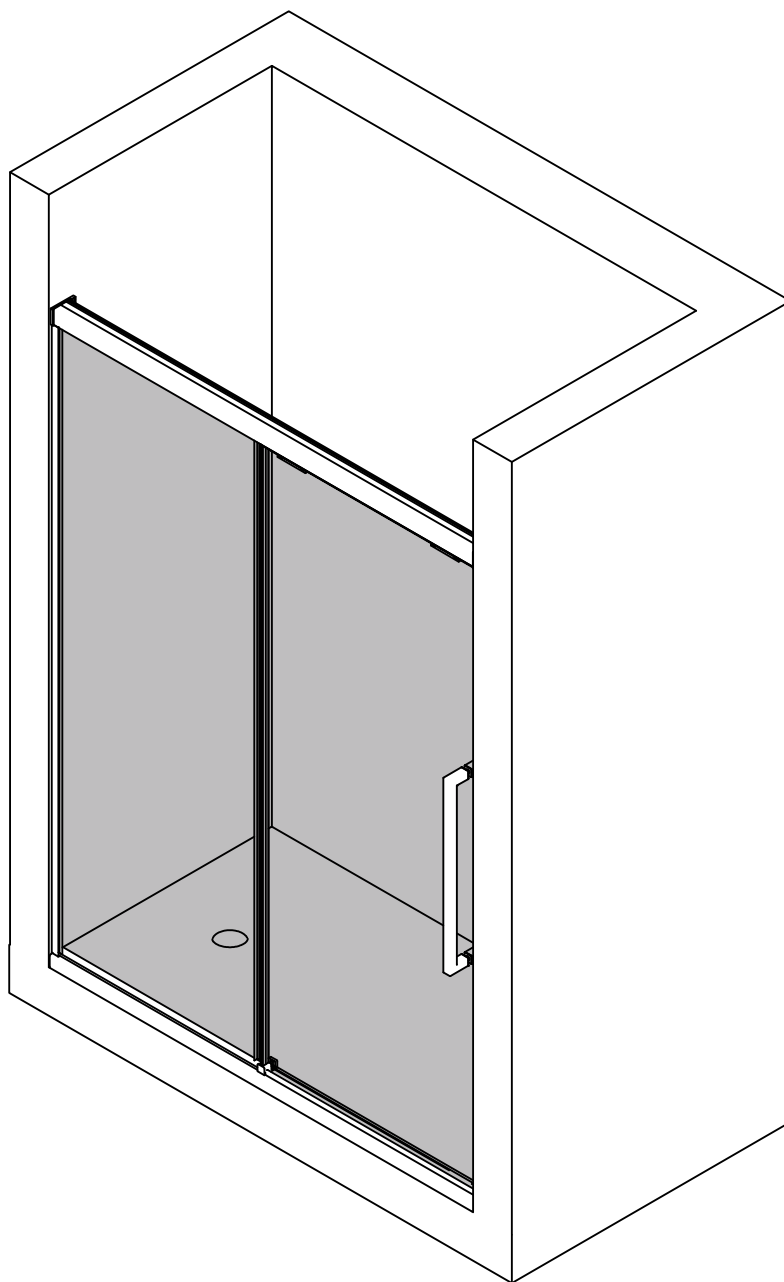






Instruções de Montagem
Assembly Instructions
Instrucciones de Montaje
Instructions de Montage

ITALBOX®






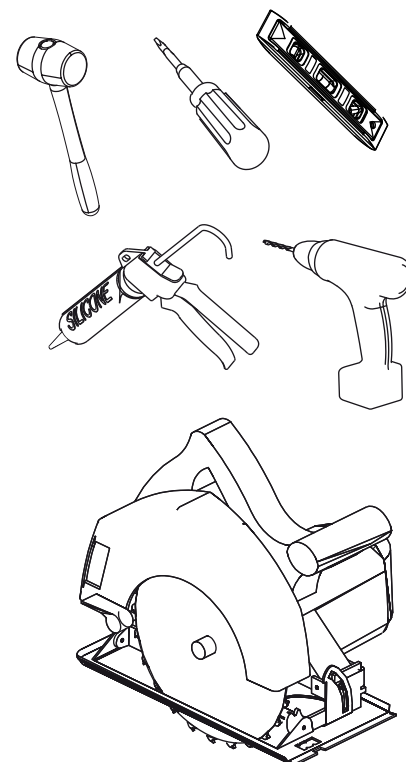




1cm

2



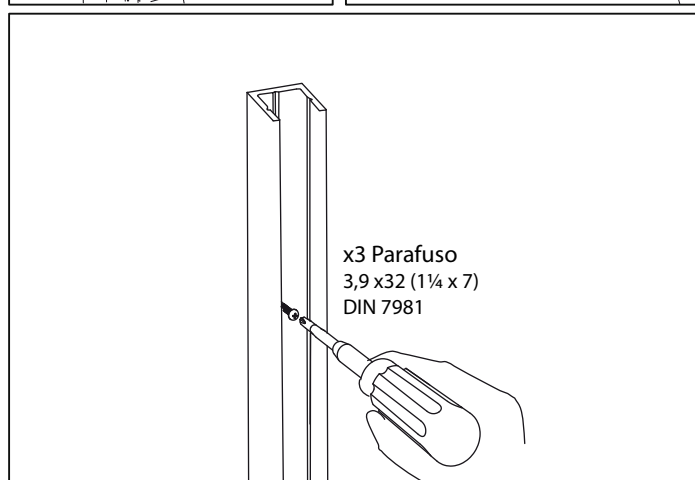
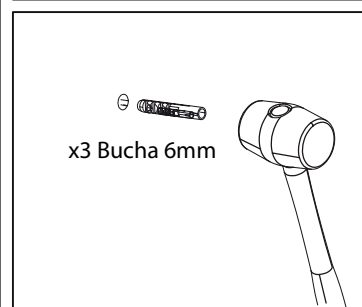
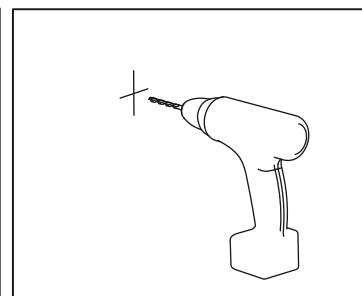
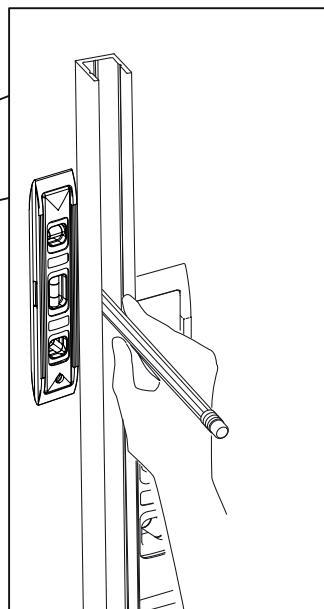
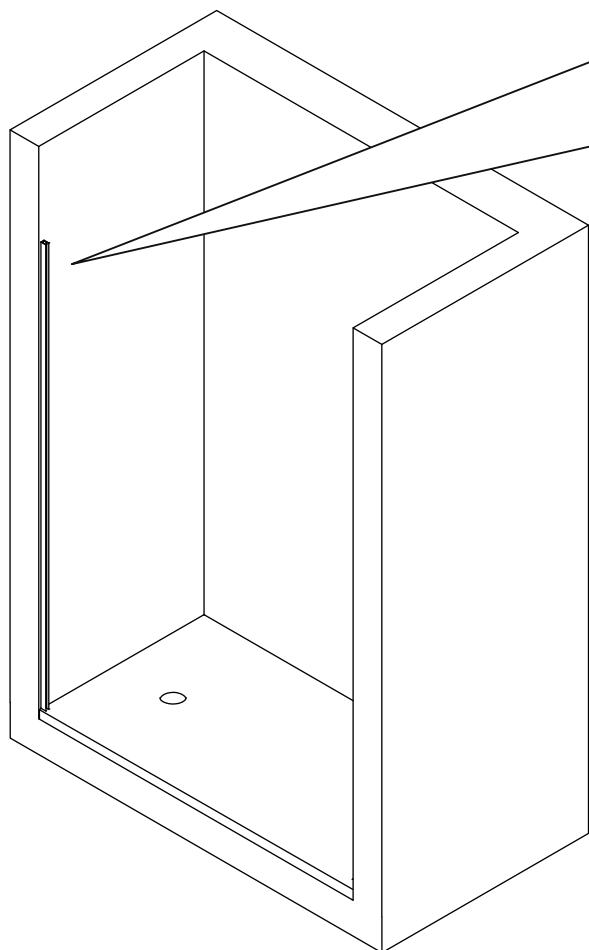


3

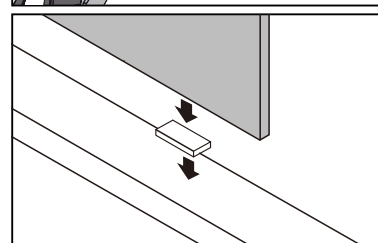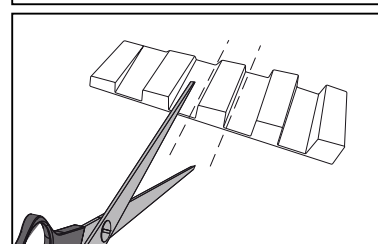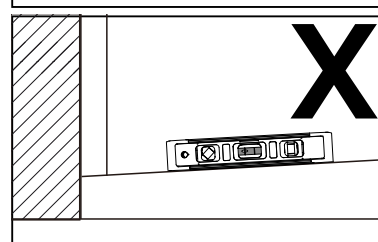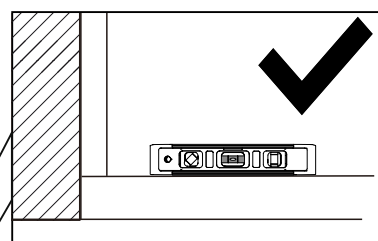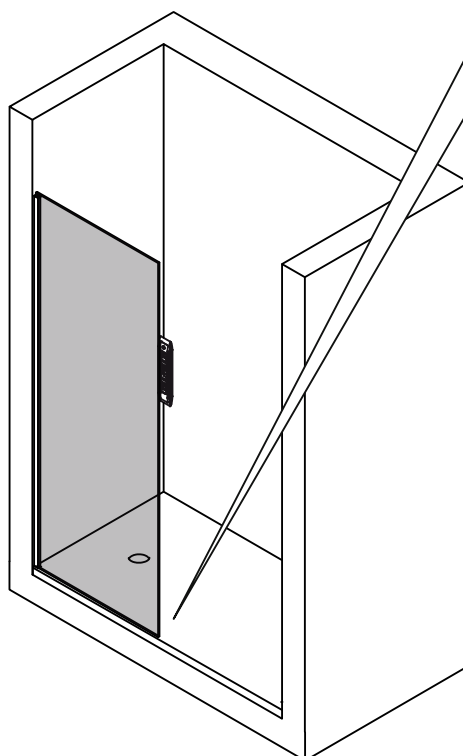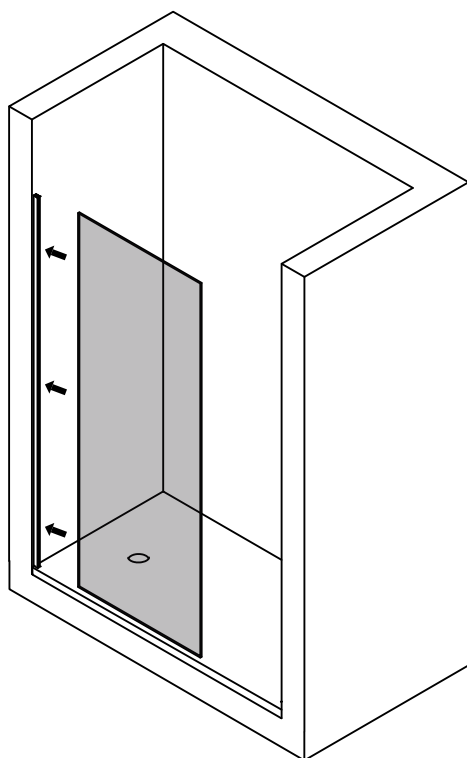


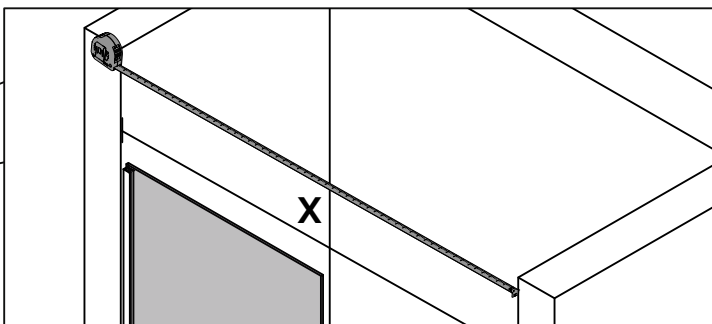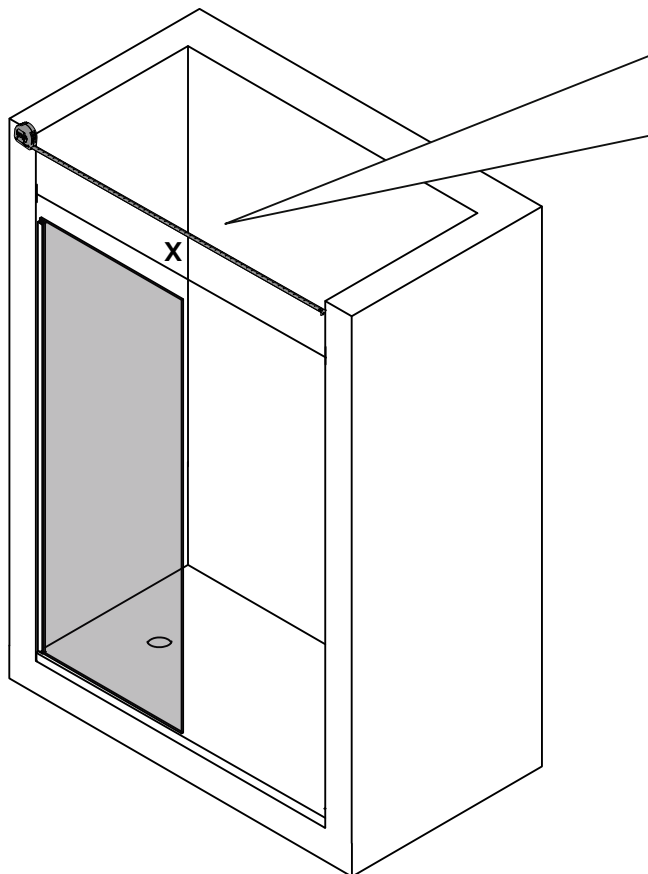


CORTE DEVE SER FEITO NA ZONA A1
CUT MUST BE MADE IN ZONE A1
LA COUPE DOIT ÊTRE EFFECTUÉE
DANS LA ZONA A1

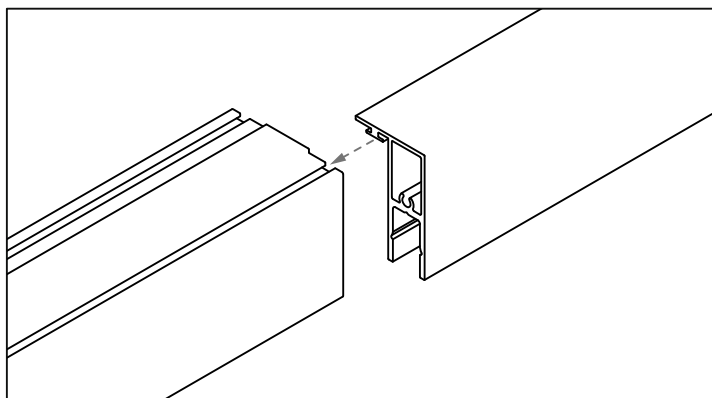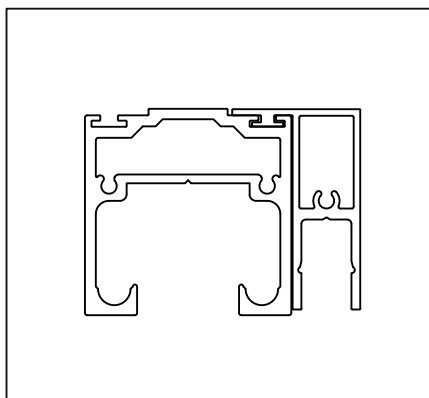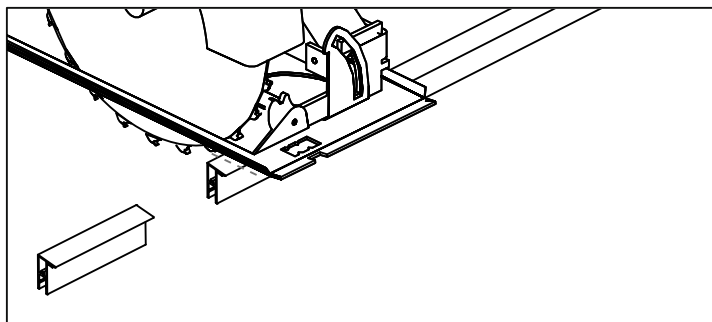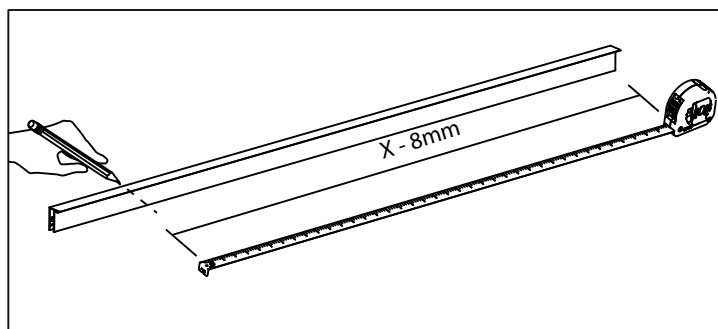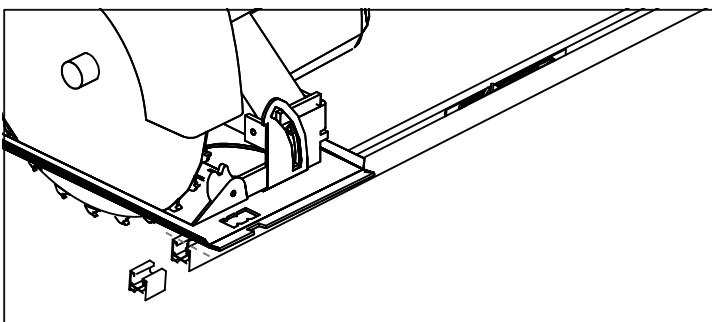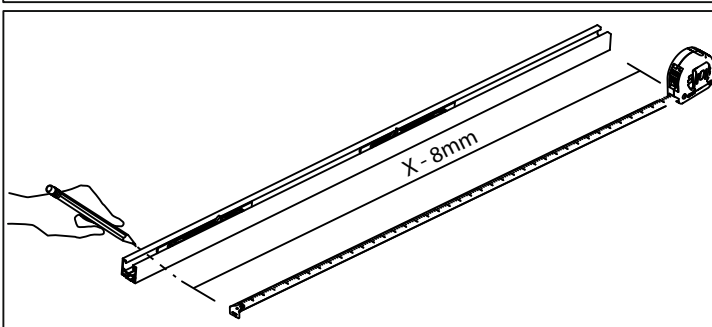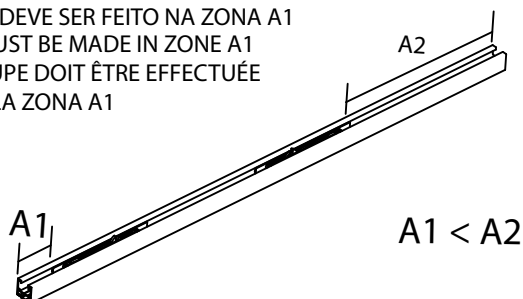


5

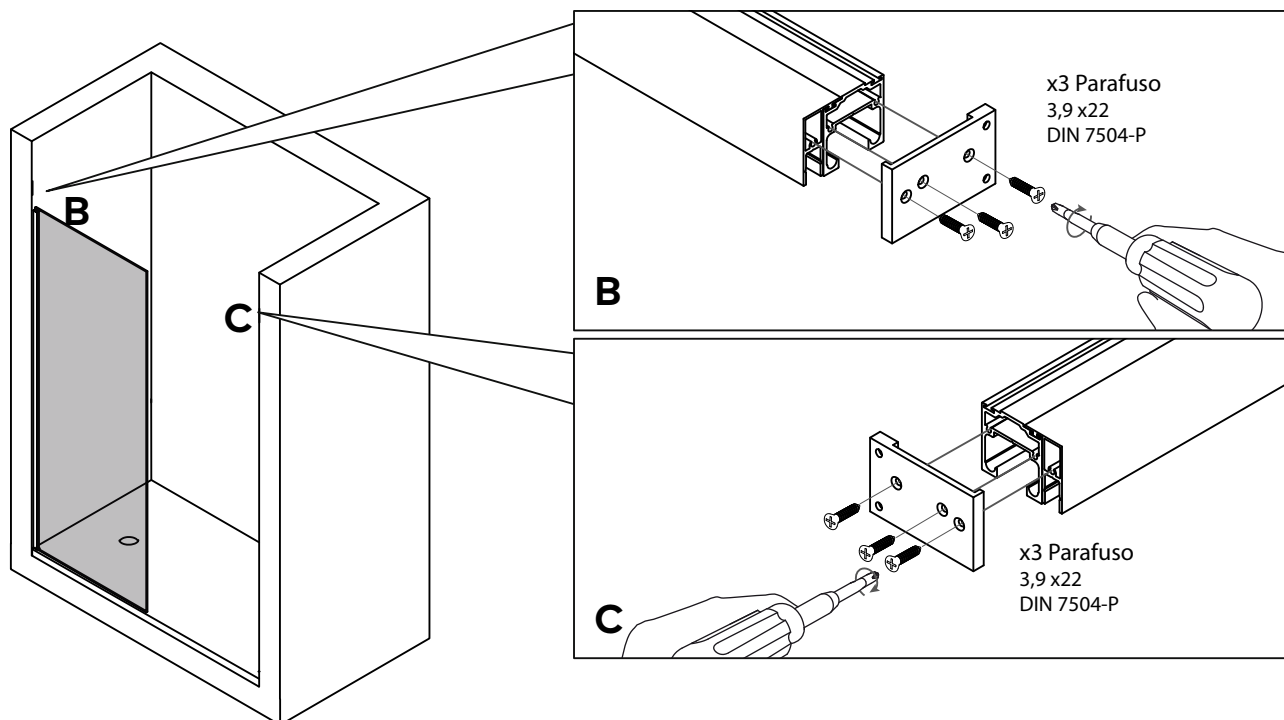


6







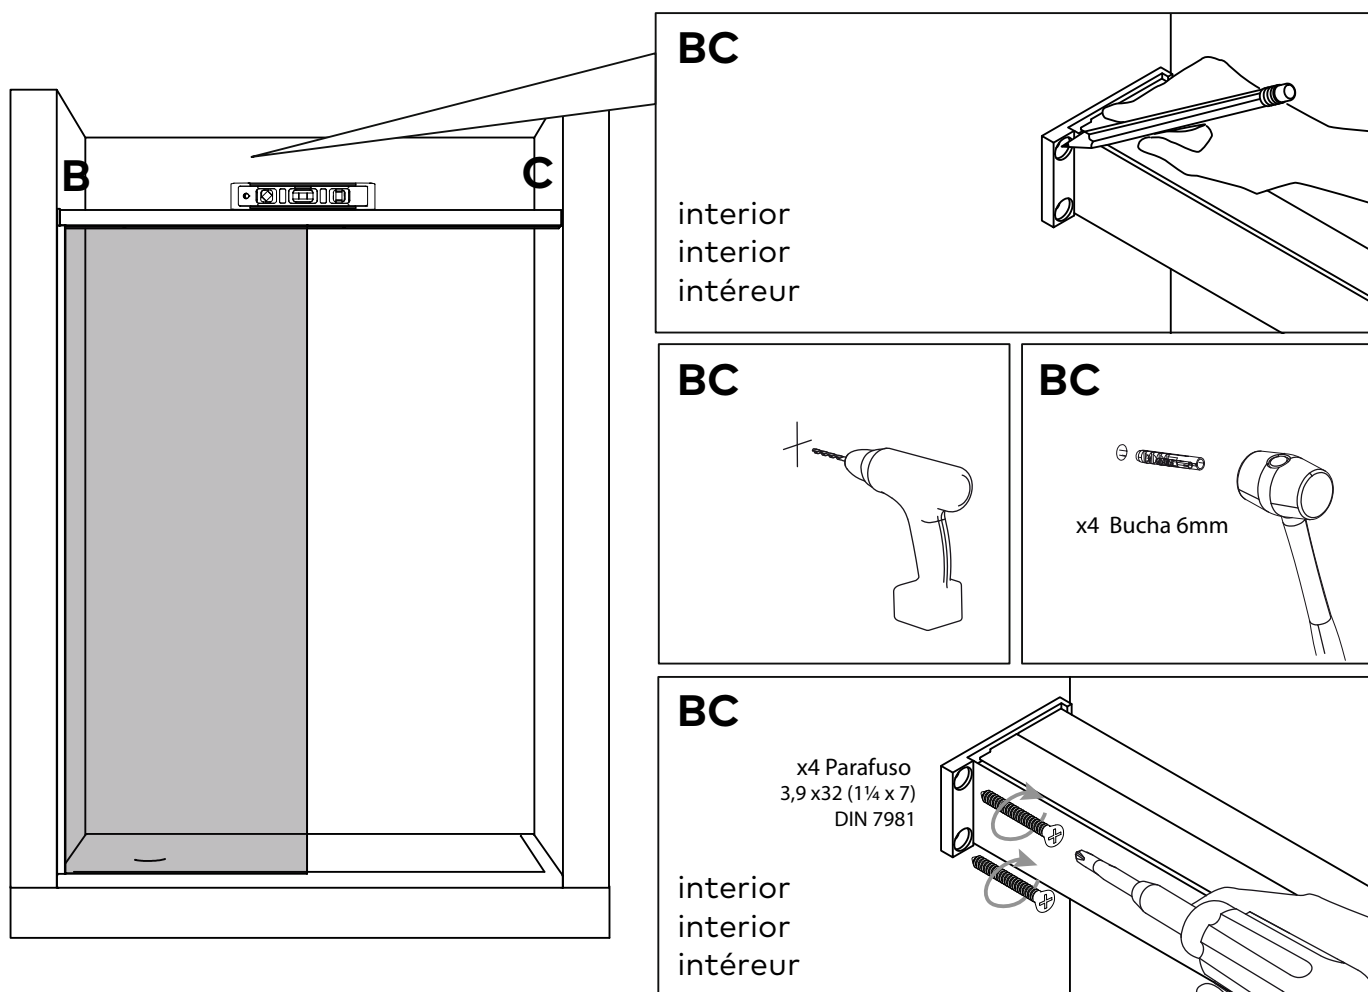


7



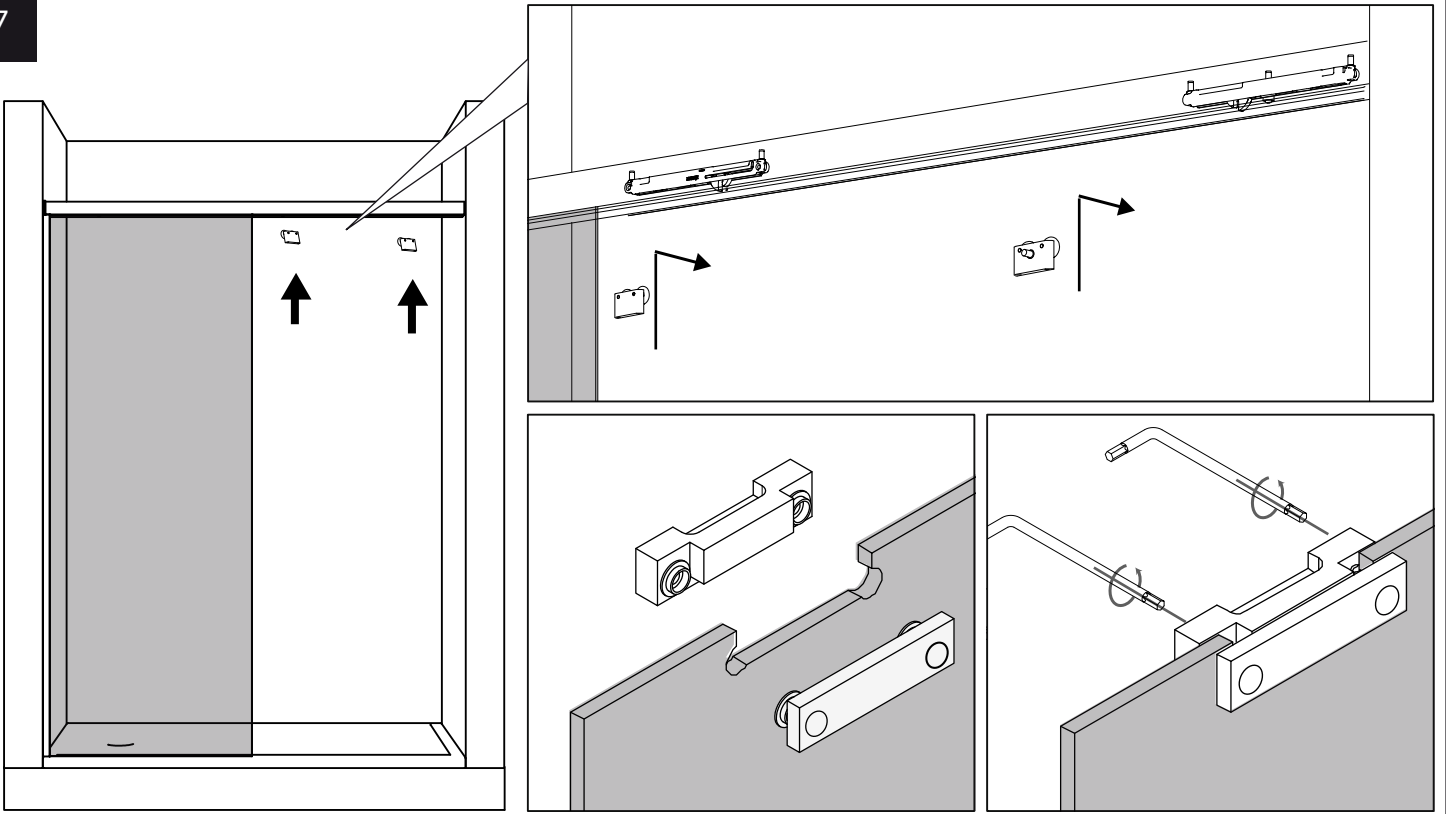


8







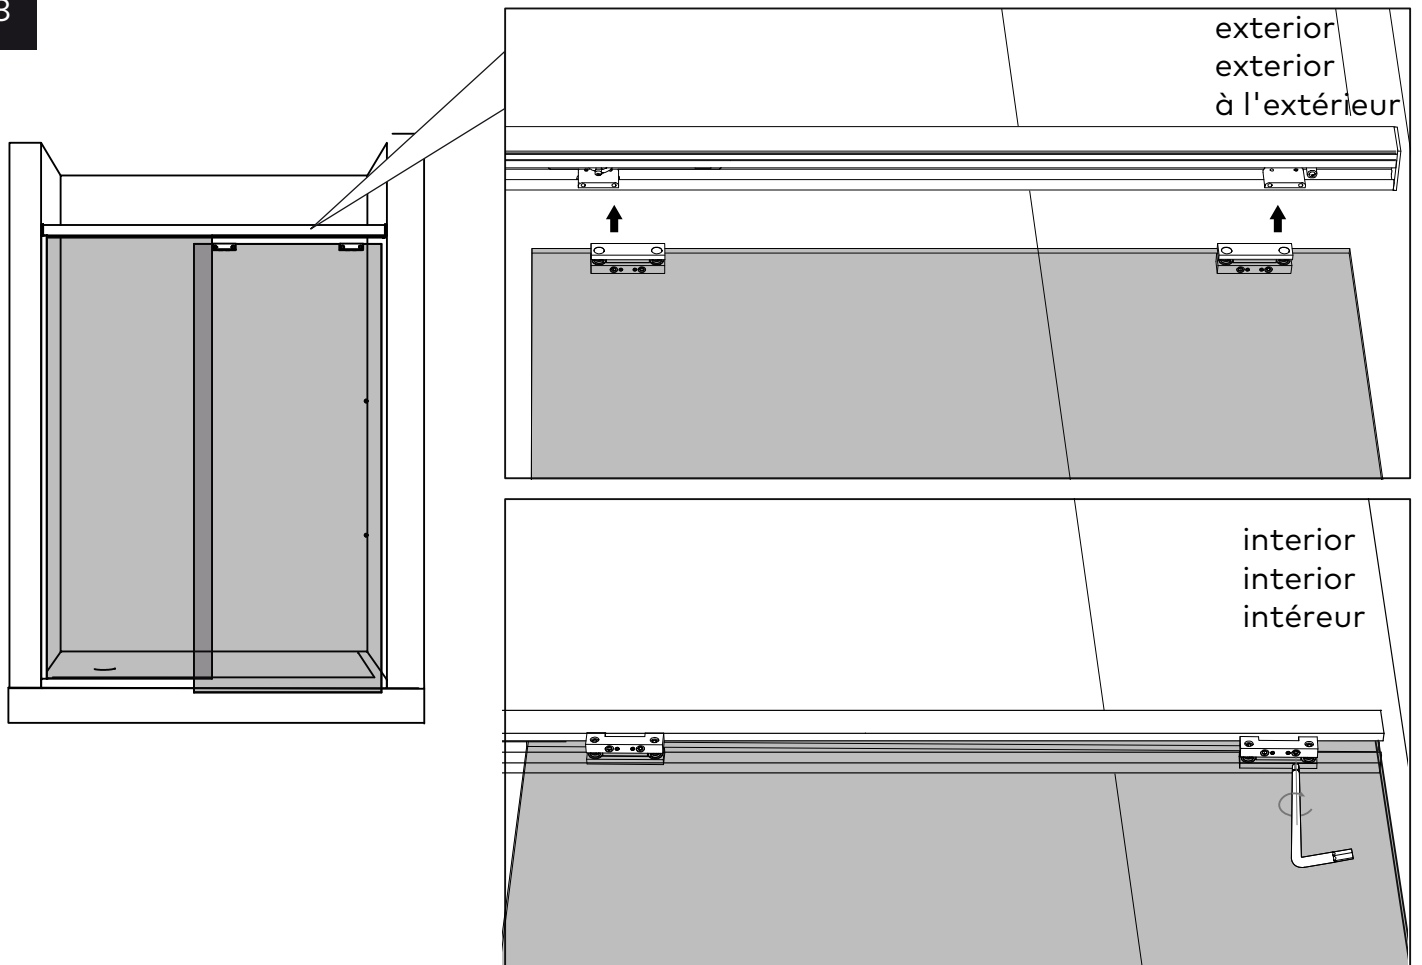


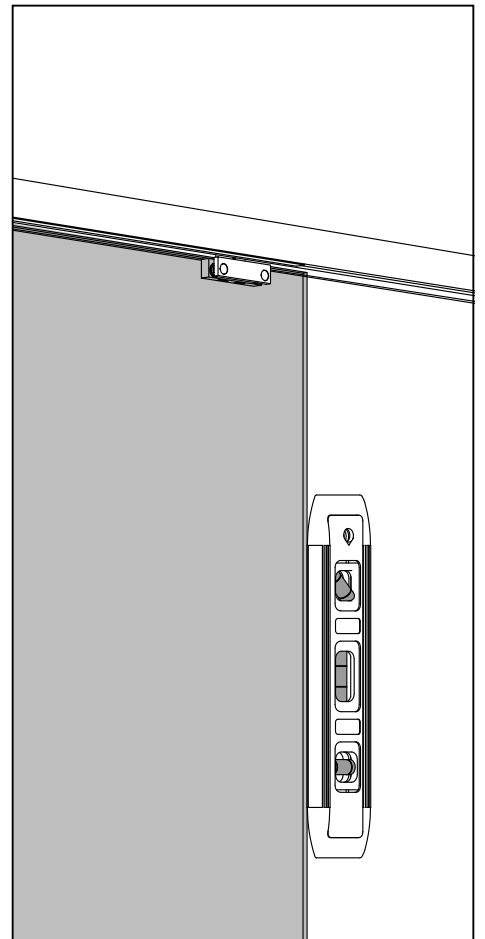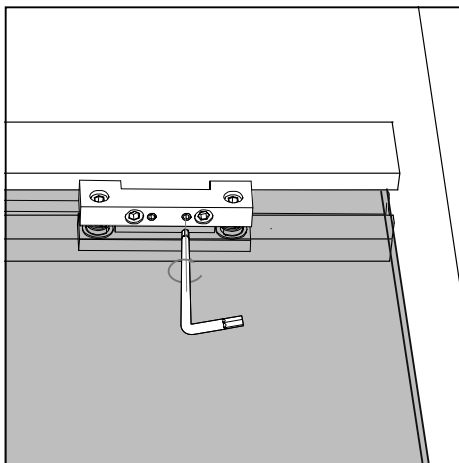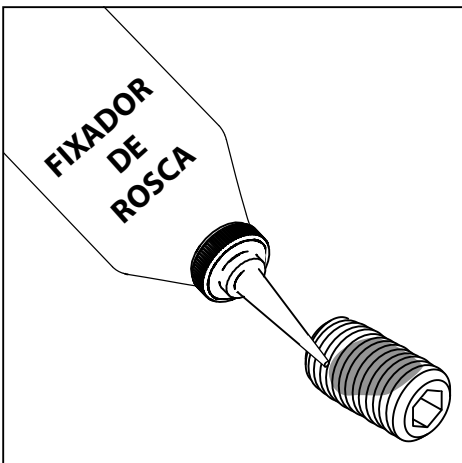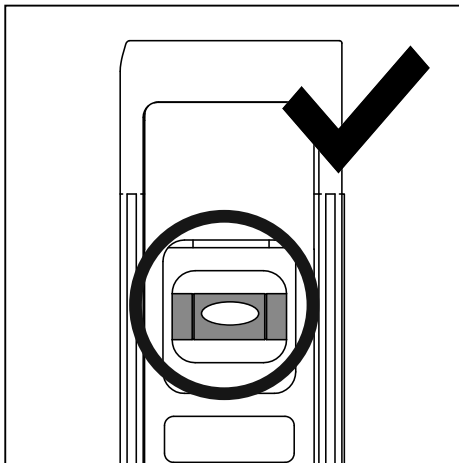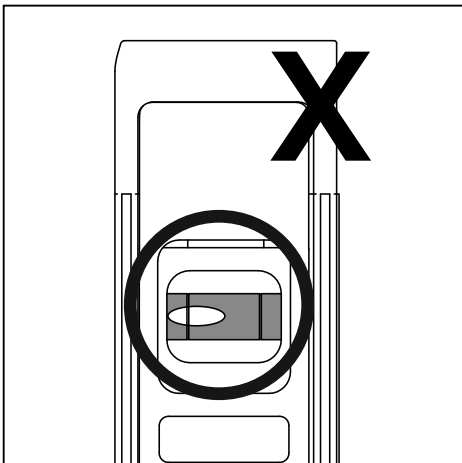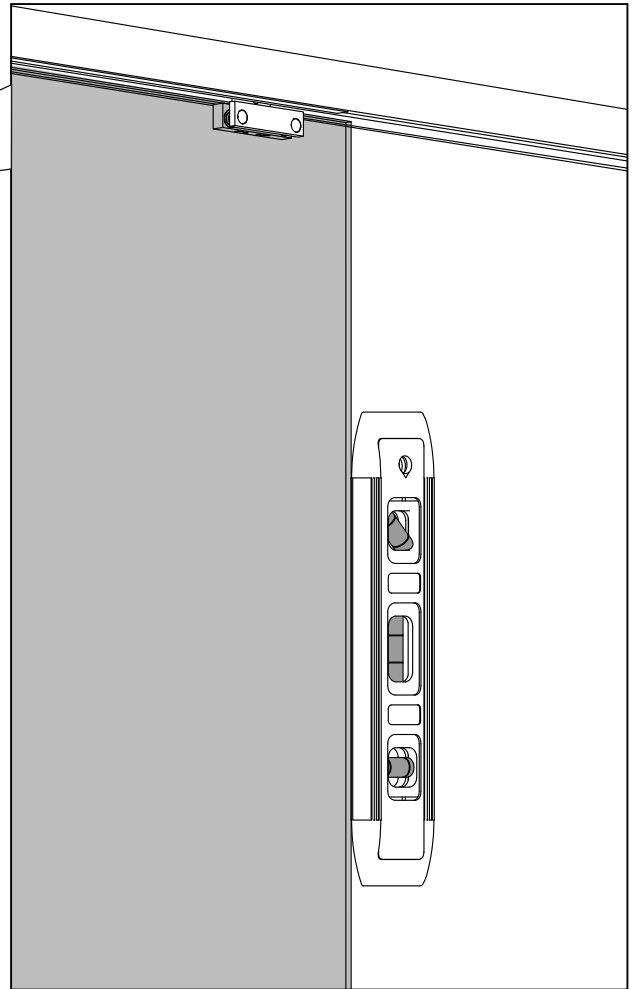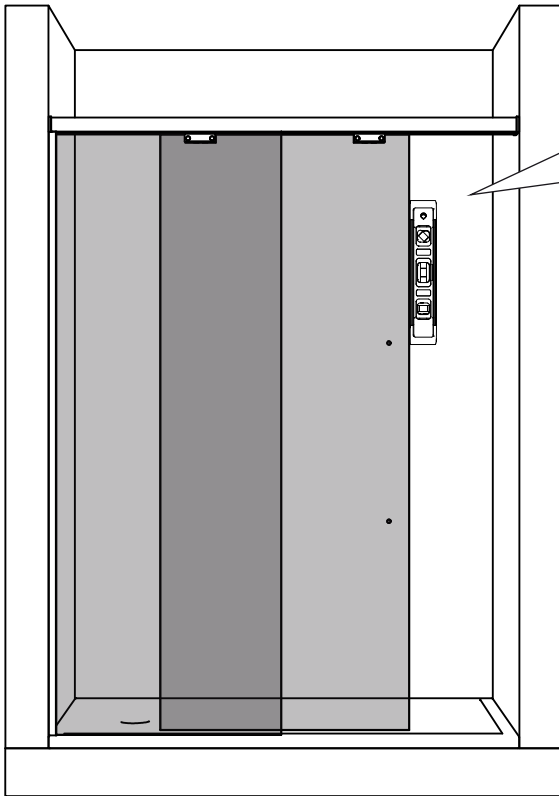




10

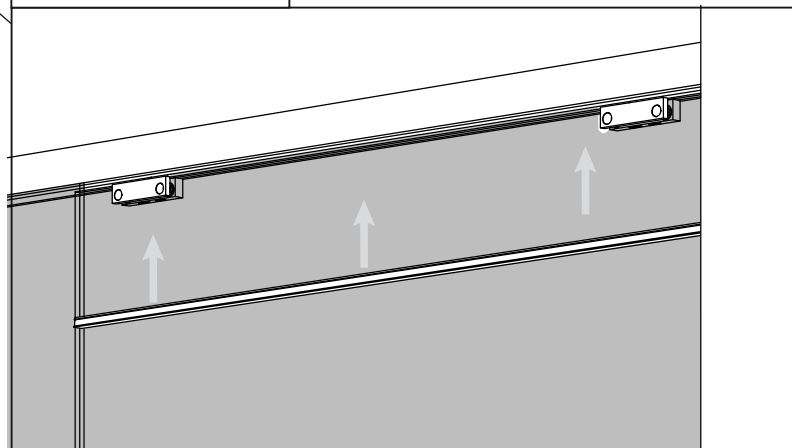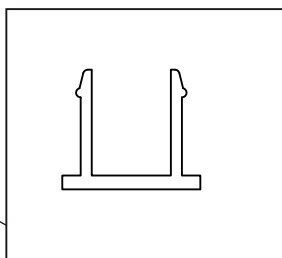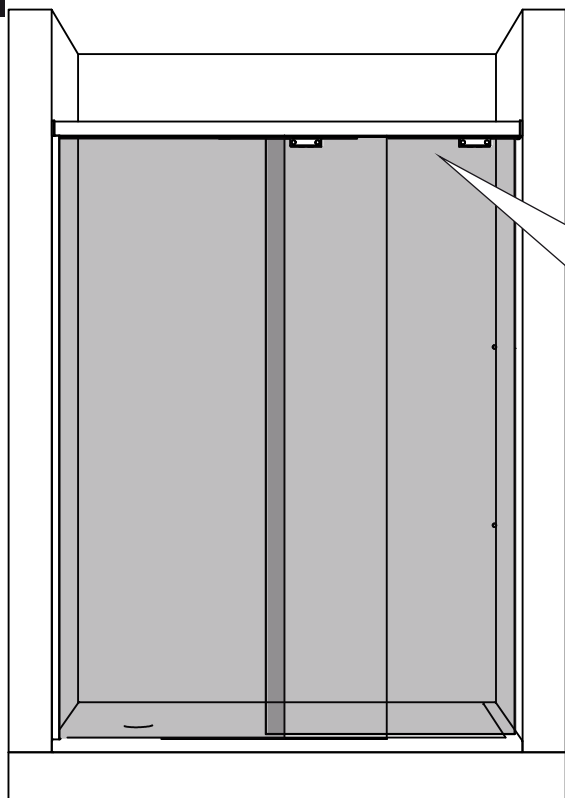



11

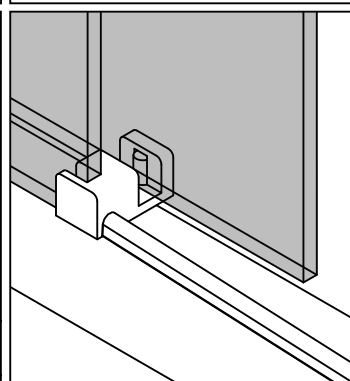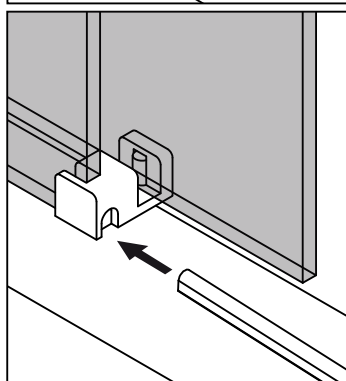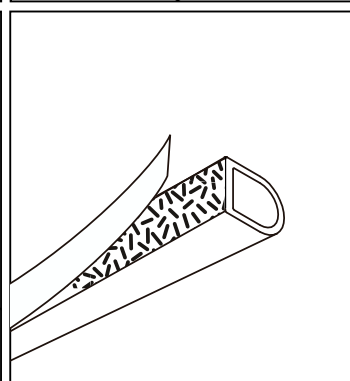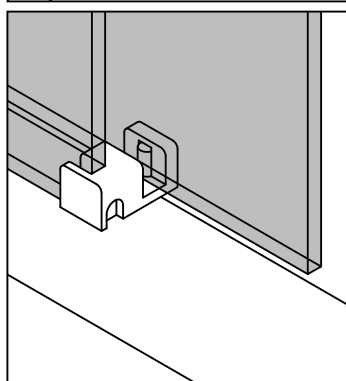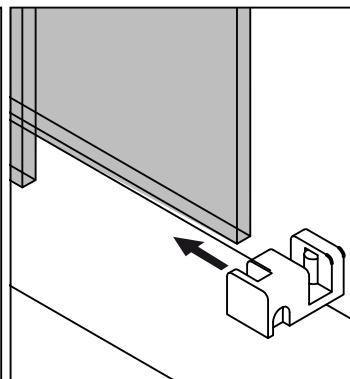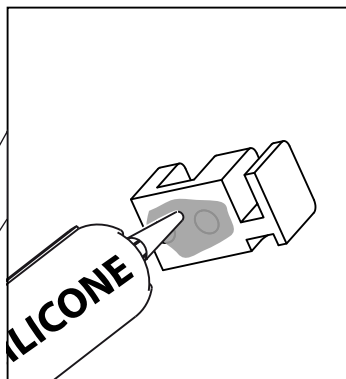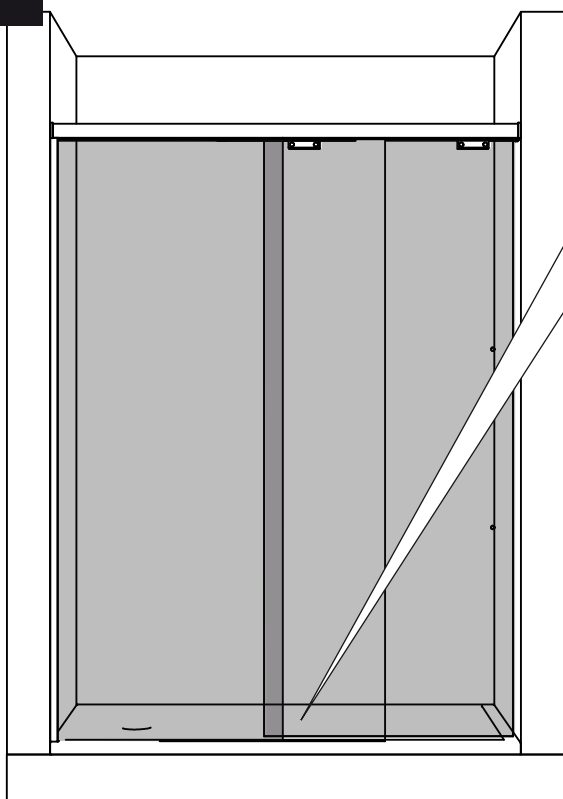





12

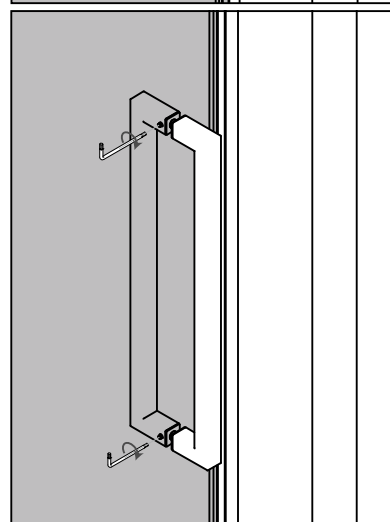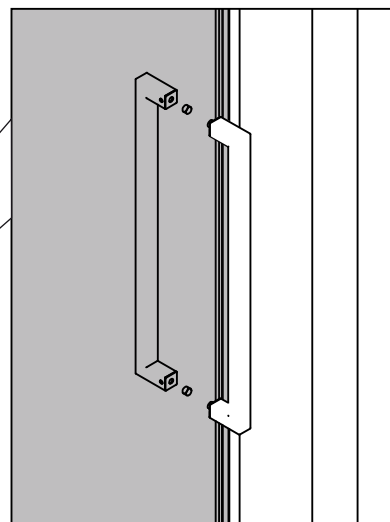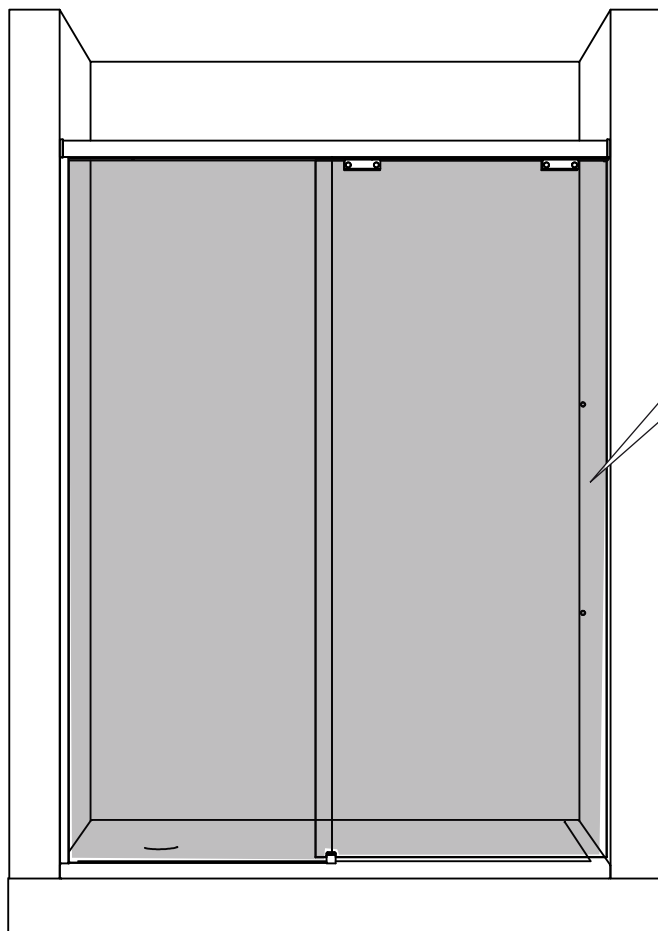

13

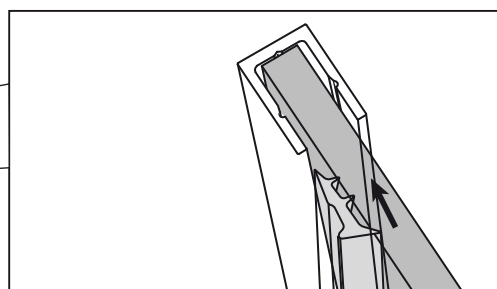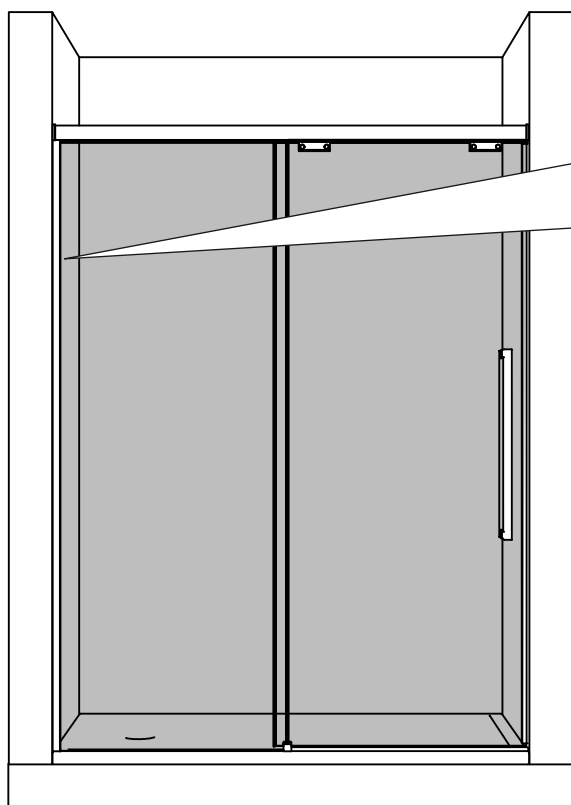

14

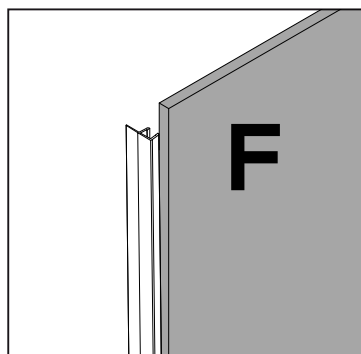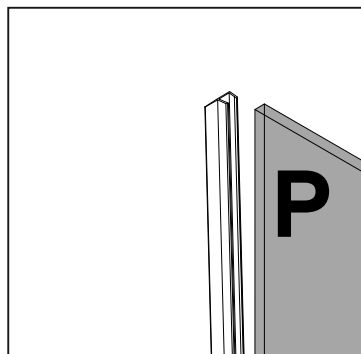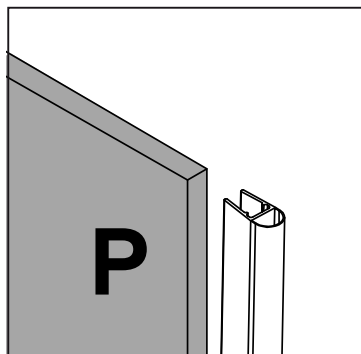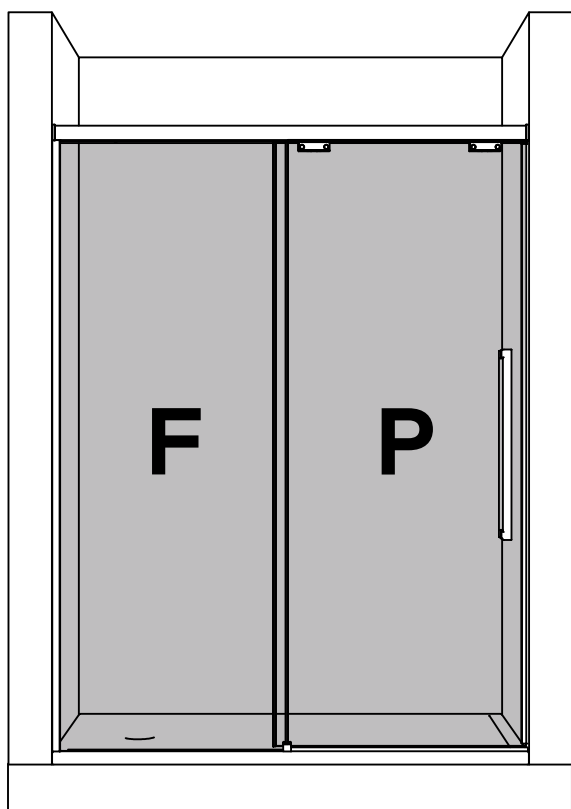

15

